



Braaap M3

FAQ

Fuel: Regular 91

Reserve fuel Positions:

No reserve location on this bike as it has a fuel gauge

Fuel tap: No access (under tank) Facing down is fuel turned on

Fuel Filter: Inline fuel filter

Oil:

10W / 40 Semi Synthetic motorcycle oil (1.3Lt)

Oil Filter: Washable gauze filter

Choke:

Is on the handlebar

On: lever pulled towards rider

OFF / Riding position: lever pushed away from rider

Tyre Pressure:

Front 28 PSI

Rear 32 PSI

Check these regularly (safety Issue)

Tyre sizes

Front:110/70/17

Rear: 150/70/17

Wheel Bearings

Front t/c

Rear t/c

Chain:

520

Must be lubricated with chain lube every 500km

Always spray the chain from the center of the bike not at the back as you may get lube on your brakes plus the lube will flick off easily (safety Issue)



Sprocket

Rear: 37

Front 13

UPGRADE

Front 14 FRONT ONLY

Service intervals:

First service 500 – 800km

Then every 3000 km after that initial one

Steering Lock:

Handle bar fully to the left

Starting:

Cold Start: No throttle Choke ON once started THEN rev it

Warm start No throttle NO choke Once started THEN rev it.

Best to start the bike in neutral.

Pull the clutch lever in to start his bike wont start if the clutch is not pulled in.

Won't start with side stand down

This bike has 6 gears

Side stand: Side stand needs to be up to start bike.

Kill Switch: Kill switch is on right hand block, please ensure Kill switch is **not** engaged if wanting to start bike.

Idle REVS 1200 – 1500

Battery: YTX7 ABS

Spark plug: D8EA

Globes

Headlight:

Hi: HS-1

Low: H1

Taillight: LED complete unit

Lights on/ off switch on right hand handlebar. On is fully pushed to the left