



Braaap MOTO 4

FAQ

Fuel:

Regular 91

Reserve Fuel Position:

Yes BUT Not accessible, not needed as it has a fuel gauge.

Fuel Tap:

No access, located under tank is in reserve position always.

Fuel Filter:

Yes inline.

Oil:

10W / 40 Semi Synthetic Motorcycle Oil

Quantity 2 Its

OIL Filter:

HF131

Choke:

Is located on Left hand handlebar.

Riding position: push forward (Away from you)

Tyre Pressure:

Front 32 PSI

Rear 34 PSI

Check these regularly

Tyre Dimensions:

Front: 110/70/17

Rear: 150/70/17

Wheel Bearings:

Front 6302

Rear 6303

Chain:

520

Must be lubricated with chain lube every 500km

Always spray the chain from the center of the bike not at the back as you may get lube on your brakes plus the lube will flick off easily.

Check chain tension every week just by tapping with your foot, It must be firm but not tight



Tools needed to tighten chain 13mm spanner, 21 mm socket, 24mm socket (two socket wrenches)

Sprocket:

Front: 13 Upgrade to 14 o4 15

Rear:37 No upgrade option available.

Note: if you change the sprocket you will need to purchase a longer chain as the original would then become too short.

Service intervals:

First service: 800km – 1000km

Then every 3000 km – 4000km after the initial one

Steering Lock: left hand lock

Cold Start:

No throttle Choke ON, as in pull lever towards you; once started THEN rev it

Warm start:

No throttle NO choke Once started THEN rev it

Side stand: Side stand (Note: bike won't start with side stand down)

Kill Switch: Kill switch is on right hand block, please ensure Kill switch is not engaged if wanting to start bike.

Idle Revs: 1200-1500

Battery: YTX7A-BS

Spark Plug: D8EA X2

Carburetor:

CZ x2

Globes:

Headlight High: ***

headlight Low: ***

Taillight: LED complete unit

Airlifter: Washable Foam filter within the airbox