



## Braaap SS-125 (braaap Street Superlight) FAQ

### Running in:

Change oil at 300km  
Do not exceed 80km for the first 500km  
First service at 500km

### Fuel:

Regular 91  
4ltr

### Oil:

10W /40 MOTORCYCLE Mineral  
Quantity 800ml

### Choke:

Left hand side of the carburetor  
On is Up  
BUT

**RIDING POSITION IS DOWN** (VERY IMPORTANT INFO)

A lot of the time you will NOT need to use the choke, just leave it in riding position unless its cold weather.

**NOTE: If you ride with the choke on your motorcycle will eventually stop, it can be very dangerous.** We find that if this happens most riders will probably continually try to get it going again which will most likely cause you to flatten the battery.

Remember the battery is NOT covered under warranty.

### Fuel tap:

Two positions

- On. Normal riding
- OFF (only turn it off if you are storing your bikes for months otherwise just leave it alone)

### Tires

**Front: 120/70-12**

**Rear: 120/70-12**

**Pressure: Front 28 PSI Rear 28 PSI**

**The tire pressure is the riders responsibility please check these regularly (a huge reason for fall offs on a motorcycle is the result of flat tires)**

### Chain: 428

The health of your chain is the rider's responsibility

We recommend that All motorcycle chains to be lubricated with chain lube every 500km

Always spray the chain lube to the center of the bike area NOT at the back as you may get lube on your brakes which would be dangerous.



**Service intervals:**

First service 500  
Then every 2000 km after that initial one

**Cold Start:** Choke on No throttle (NO THROTTLE put your hand on the block **ensure you do NOT nock the kill switch on** ) .....Choke ON ..... once started **THEN** rev it  
Warm start No Choke NO THROTTLE put your hand on the block so you are not tempted to rev it also **ensure you do NOT knock the kill switch on** Once started THEN rev it.

**Starting:**

always best to start the bike in neutral.

**PULL CLUTCH LEVER IN**

This bike has 4 gears (all UP)

Is the kill switch off?

**YOUR MOTORCYCLE WILL NOT START UNLESS THE CLUTCH IS PULLED IN  
YOUR MOTORCYCLE WILL NOT START WITH THE KILL SWITCH ON  
IF YOU CONTINUALLY TRY TO START YOUR MOTORCYCLE WITHOUT SUCCESS  
YOU WILL**

**FLATTEN THE BATTERY**

**IF YOU HAVE TROUBLE STARTING YOUR MOTORCYCLE, PLEASE PHONE THE  
WORKSHOP ON 0449901123 BEFORE YOU FLATTEN THE BATTERY.**

**IF YOU FLATTEN THE BATTERY YOU WILL NEED TO CHARGE IT  
THE BATTERY IS NOT COVERED UNDER WARRANTY**

**Globes:**

Main Globe HS1 35/35

Park Globe BA9S 12V 4W

Tail Light LED

**Spark Plug:**

Spark plug setting .7

Spark Plug: C7sa

Battery: RTX4-LBS

**Air filter:**

FOAM in an airbox Cleanable and re-usable

**Side stand:**

Note the side stand is NOT self-retracting so ensure you raise it before riding off

**Enjoy your ride**

Text or call the workshop during normal business hours 0449 901 123

Thank you

Braaaaaaaaaaaaaaap !!